


Before buying the Carplay interface BMW, you need to check the BMW iDrive version in your car. Here are some tips that might be helpful for you.

Step 1. Check the car type, menu style, year of production

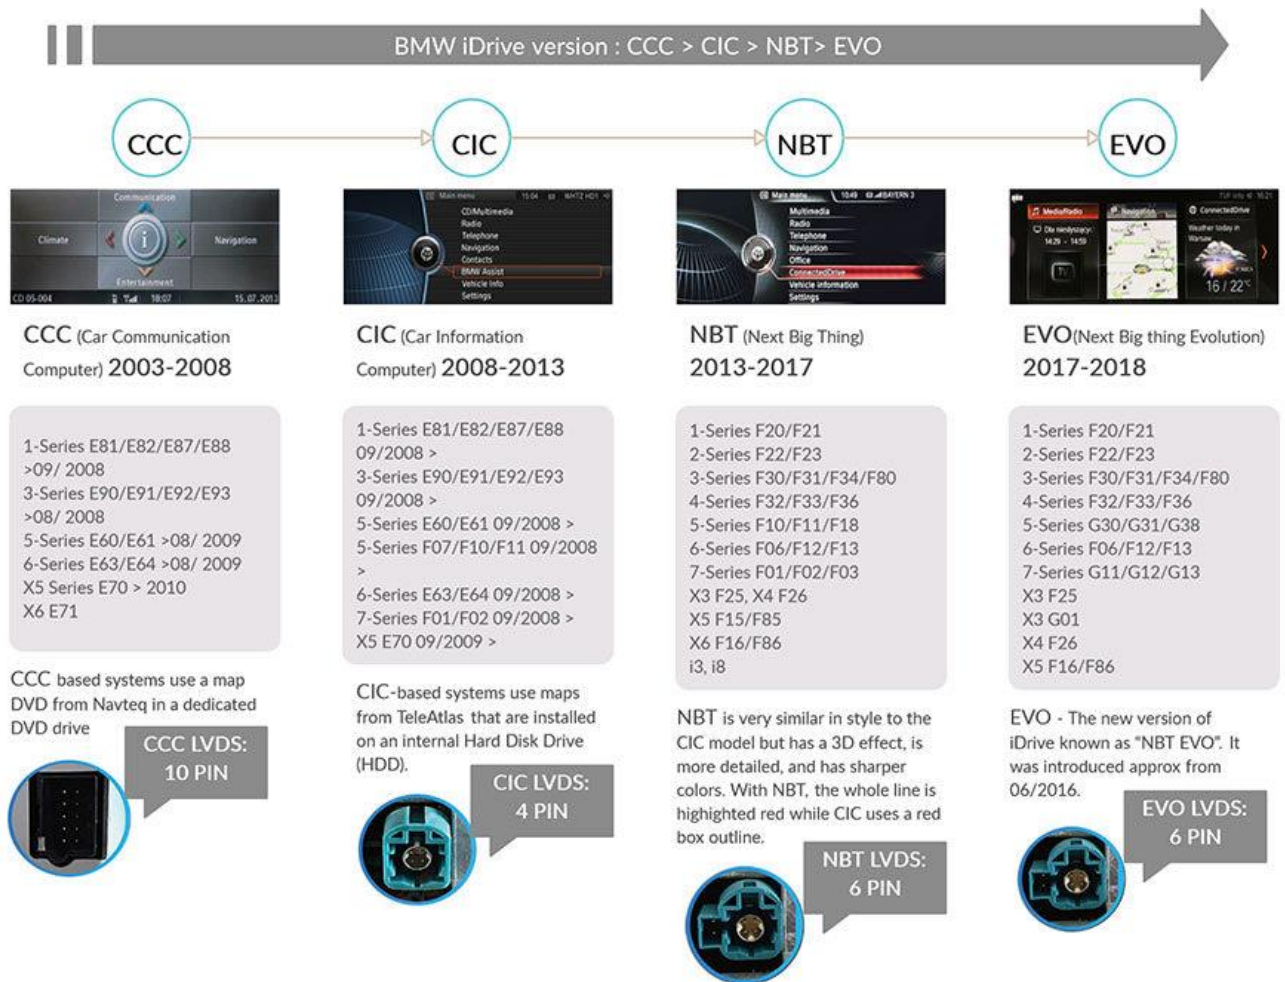


Step 2. Check the LVDS connector of the screen

For some car types, especially for the car with CIC menu and made in 2012~2014, the LVDS might be 4 Pin or 6 Pin, we suggest removing the original screen to check the LVDS connector.

4pin = CIC

6pin = NBT

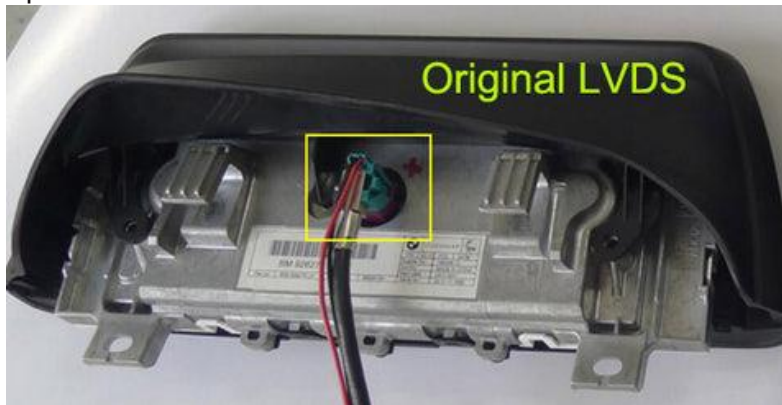

BMW CCC MENU



BMW CIC MENU



BMW NBT/EVO MENU

Usually, cars with CIC-menu should have 4 PIN LVDS, but in some special cars (**mostly BMW 1 series and BMW with 6,4 inch screen**) it is 6 PIN LVDS. In that case it's a NBT system.



This is NBT system! (CIC menu, but 6 pin LVDS cable connected to the screen)